

# HOW TO FIT GENIEGRIPS® CAPS



## STEP 1:

### Raise Forktynes

SAFELY raise forktynes to waist height.

*Ensure Caps are correct way up, with the metal surface at the top.*

## STEP 2:


### Insert Caps

Approach tyne at 90 degree angle and slot the Caps on to the tip of forktynes. Firmly push them on to tyne – use rubber mallet if needed, to ensure the tip of the tyne touches inside back cap.

## STEP 3:

### Adjust Screws

Once firmly on tyne, tighten each grub screw to allow it to touch the tyne.

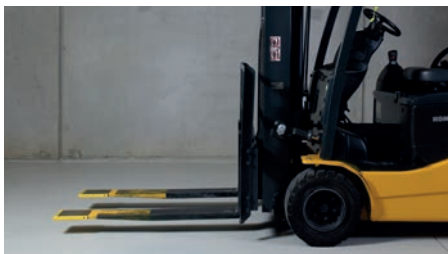

## STEP 4:

### Tighten Screws

Once screws are in place, then firmly re tighten each side for a secure fit. Ensure Cap is aligned with tyne.

## STEP 5:

### During Use

Caps are now ready for use.

**Important:** When using the GenieGrips® Caps, licenced forklift drivers must enter the pallet at a 90 degree angle and allow sufficient clearance above and below tyne when entering/exiting to ensure Cap installation is not compromised.

## STEP 6:

### Removal and Storage

To remove, simply untighten the grub screws and pull Cap off the tyne.

Store Caps in protective drawstring bag provided.



## ALWAYS:

- Ensure GenieGrips® Caps are kept clean and free of contamination (eg grease, oil, paint, etc)
- Ensure forklift truck is only operated by licenced/trained personnel and in accordance with manufacturer's safe operating procedures.

## IMPORTANT:

*Frequently check that the grub screws remain tight at all times during use of Caps.*