


# HOW TO FIT GENIEGRIPS<sup>®</sup> MATS



## STEP 1:

### Raise Forktynes

Raise forktynes to waiste height.

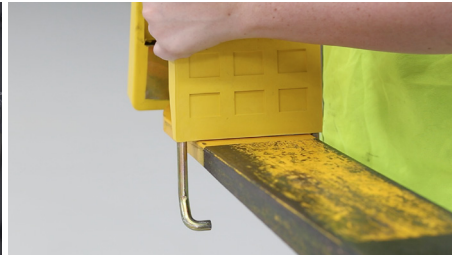

## STEP 2:

### Insert Heel

Slide heel hook onto the forktyne.



## STEP 3:

### Guide Toe Cap

Guide toe cap onto the front tip of the forktyne.



## STEP 4:

### Slide Heel Hook

Finish by sliding the heel hook behind the heel of the forktyne



## STEP 5:

### To Remove

Reverse steps 1-4 to remove GenieGrips.



## STEP 6:

### Fold, Store Away

Instructions on how to do this step go [here](#), instructions on how to do this step go [here](#).



## HELPFUL HINT:

*"Instrusctions on the helpful hint go [here](#), Instrusctions on the helpful hint go [here](#), Instrusctions on the helpful hint go [here](#)..."*